 
 
 
 
 

 



Functions

FE5400S Multi-Point Exit Device Latching System

Trim

FE5400S Outside Inside	Series/ Function	ANSI No.	Function Description
	Exit Only	01	Exit only; no trim.
	Dummy	02	Entrance by trim when actuating bar is dogged down.
	Classroom*	05	Entrance by thumbpiece. Key locks or unlocks thumbpiece.
	Passage	15	Entrance by trim when latch is retracted by thumbpiece. Thumbpiece is always active, no cylinder.
	Storeroom (Thumbpiece Active)	06	Entrance by thumbpiece only when released by key. Key removable only when locked.
	Classroom*	08	Entrance by knob or lever. Key locks or unlocks knob or lever.
	Passage	14	Entrance by trim when latchbolt is retracted by knob or lever. Knob or lever always active, no cylinder.
	Storeroom (Grip Active)	09	Entrance by knob or lever only when released by key. Key removable only when locked.

*Classroom function trims can be converted to Storeroom function by a simple field adjustment.